



3526
調整型
板金銼刀架
ADJUSTABLE
BODY BLADE



板金銼刀片
BODY BLADE

編號 Item	長度 Length	TPI
3527	14"	12TPI
3528	14"	9TPI



板金用合金鋼大頭鎚
ALLOY STEEL LARGE HEAD HAMMER

編號 Item	Spec	Size of hammer head
2563	Sidelong (→)	φ30
2564	Vertical (↑)	φ30



2565
板金用圓弧成形錘
ROUND HEAD
HAMMER



2559
板金用絞縮錘
RADIAN'S COLLISION
HAMMER



2558
板金用絞縮鉗
PLATE
CONSTRICTING
TOOL



板金用鐵皮剪刀
PROFESSIONAL
BODY SNIPS

編號 Item	刀口 Edge
2560	直型 straight
2561	小彎 small angle
2562	大彎 large angle



2554
7PCS
橡膠撐板組
7PCS RUBBER
DOLLY



2501
自動點焊倒盾組
AUTOMATIC
WELDING
SLIDE HAMMER



2503
點焊鉤倒盾組
SLIDE HAMMER
HOOK SET



2510
點焊機用地線夾
GROUND CLAMP



2513
點焊機用正極手柄組
WELDING
HANDLE KIT



5500
板金用點焊機
SPOT WELDING
MACHINE



5400
迷你型板金
點焊機
MINI SPOT
WELDING
MACHINE

編號 Item	2504	2505	2506	2514	2507	2508	2509	2512
Picture								
NAME	HOOK 點焊鉤子	WASHER CLAMP 5200單司夾頭	WASHER CLAMP 5500單司夾頭	WASHER CLAMP 6000單司夾頭	LONG STUD WELD TIP 點焊頭	SLOTTED WELD TIP 熱熔頭	CANNON 砲槍	COPPER BASKETS 銅卷司 500PCS

大車工具 TRUCK TOOL SERIES

板金用撬棒
BODY PRY BARS

編號 Item	Model	Length
2535	F1NG(小彎)	580mm
2536	F1VG(美式)	580mm
2537	F130(3尺)	900mm
2538	F125(2尺半)	750mm
2539	F120(2尺)	600mm
2540	F115(1尺半)	450mm
2541	F12W(單頭)	240mm

板金用打板
BODY WEDGE TOOLS

編號 Item	Model	Width	Length
2542	21LV(L型)	125mm	255mm
2543	21TV(T型)	137mm	255mm
2544	2125(大頭)	92mm	110mm
2545	2155(中頭)	70mm	110mm
2546	21V5(小頭)	48mm	110mm
2547	215J(中丸)	70mm	110mm
2548	21VJ(小丸)	48mm	110mm

板金用擋盤
BUMPING TOOLS

編號 Item	Model	Spec	WxDxH
2549	2121(單薄)	Single thin	80x56x26
2551	21GA(雙面)	Twin surface	92x58x28
2552	21T1(超薄)	Super thin	116x66x19
2553	2122(圓點)	Comma	130x60x43



4752
卡車球接頭
拆卸器(32mm)
TRUCK BALL
JOINT
SEPARATOR
(32mm)



4751
卡車球接頭拆卸器
(30mm)
TRUCK BALL
JOINT
SEPARATOR
(30mm)



4753
卡車球接頭拆卸器
(39mm)
TRUCK BALL
JOINT
SEPARATOR
(39mm)



5243
歐系卡車球接
頭拆卸器(39mm)
HGV BALL
JOINT
SEPARATOR
(39mm)



7768
開窗型方向機搖臂
拆卸器(58mm)
WINDOW TYPE
PITMAN ARM
PULLER(58mm)



卡車方向機搖臂接頭拆卸器
TRUCK PITMAN ARM PULLER

編號 Item	開口 A	內徑 B	內高度 C
4070	42	80.6	59.5
4071	47	85	62.9
4072	58	96	75.4
4073	62	100	75.4
4074	67	105	75.4



4891
油壓式大車球接頭
拆卸器
**HYDRAULIC HGV BALL
JOINT SEPARATOR**



5159
大車油壓更換型
球頭拆卸器
**CHANGEABLE
HYDRAULIC BALL
JOINT SEPARATOR**



7683
通用型卡車球
接頭拆卸器
**UNIVERSAL
TRUCK BALL
JOINT SEPARATOR**



4014
FUSO 氣缸壓力接頭
(6M70)
**FUSO COMPRESSION
TESTING ADAPTER**



 
4015
FUSO 氣缸壓力接頭
(6M60)
**FUSO COMPRESSION
TESTING
ADAPTER**



4016
FUSO 預熱塞接頭
**FUSO GLOW PLUG
TESTING ADAPTER**



4017
FUSO 全空氣
煞車拆裝器
**FUSO FULL
AIR BRAKE
SYSTEM REMOVER**

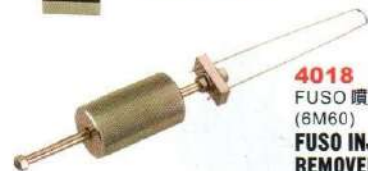

4018
FUSO 噴油嘴拉拔器
(6M60)
**FUSO INJECTOR
REMOVER**



4019
FUSO
柴油濾心器扳手
**FUSO DIESEL OIL
FILTER WRENCH**



4467
FUSO
風扇支撐板手(2點)
**FUSO FAN CLUTCH
HOLDER(2 POINT)**



4341
FUSO
曲軸前油封拆卸器
**FUSO CRANKSHAFT
FRONT OIL SEAL
REMOVAL TOOL**



4342
FUSO
曲軸前油封安裝器
**FUSO CRANKSHAFT
FRONT OIL SEAL
INSTALLATION TOOL**



4343
FUSO 飛輪固定器
(手排車)
**FUSO FLYWHEEL
HOLDER(MANUAL)**



4344
FUSO 飛輪固定器
(自手排車)
**FUSO FLYWHEEL
HOLDER(SAT)**



4354
FUSO 動力轉向泵
傳動軸固定器
**FUSO POWER
STEERING PUMP
DRIVE SHAFT
HOLDER**



4356
FUSO 柴油噴油嘴
拆卸器
**FUSO DIESEL
INJECTOR
REMOVAL TOOL**



4357
FUSO 下正時鏈條蓋
安裝定位器
**FUSO TIMING CHAIN
LOWER HOOD
INSTALLATION TOOL**



4358
FUSO 曲軸
正時定位棒
**FUSO CRANKSHAFT
ALIGNMENT TOOL**



4359
FUSO 凸輪軸
正時校正器
**FUSO CAMSHAFT
TIMING TOOL**



4360
FUSO 動力方向盤
泵浦扳手組
**FUSO POWER
STEERING PUMP
WRENCH SET**



4362
FUSO
氣門彈簧拆裝組
**FUSO VALVE
SPRING REMOVE/
INSTALL KIT**



4363
FUSO
曲軸後油封拆卸器
**FUSO CRANKSHAFT
REAR OIL SEAL
REMOVAL TOOL**



4364
FUSO
曲軸後油封安裝器
**FUSO CRANKSHAFT
REAR OIL SEAL
INSTALLATION
TOOL**



4365
FUSO 燃油管拆卸器
**FUSO FUEL PIPE
REMOVAL TOOL**



4366
FUSO
離合器油封安裝器
**FUSO CLUTCH SEAL
INSTALLATION TOOL**



4105
FUSO
方向機油封套筒(70mm)
**FUSO STEERING
MECHANISM OIL
SEAL SOCKET(70mm)**



7772
FUSO
方向機油封套筒(53mm)
**FUSO STEERING
MECHANISM OIL
SEAL SOCKET(53mm)**



7773
FUSO
方向機油封套筒(49mm)
**FUSO STEERING
MECHANISM OIL
SEAL SOCKET(49mm)**



7797
FUSO
柴油濾心器扳手(401)
**FUSO DIESEL OIL
FILTER WRENCH(401)**



7798
FUSO 活塞導入器(6D)
**FUSO PISTON
INSTALLER(6D)**



7799
FUSO 後輪軸螺帽套筒
**FUSO REAR WHEEL
NUT SOCKET**



7687
FUSO 變速箱培林軸套
拆卸組
**FUSO TRANSMISSION,
BEARING, BUSHING
REMOVAL KIT**



4119
ISUZU 曲軸前油封
安裝器(3.5T)
**ISUZU CRANKSHAFT F
RONT OIL SEAL
INSTALLER(3.5 T)**



5184
ISUZU 曲軸前油封
拆卸器(4JJ1)
**ISUZU CRANKSHAFT
FRONT OIL SEAL
REMOVER(4JJ1)**



5185
ISUZU 曲軸前油封
安裝器(4JJ1)
**ISUZU
CRANKSHAFT
FRONT OIL SEAL
INSTALLER(4JJ1)**



5593
ISUZU 曲軸前油封
安裝器(4JJ1)
**ISUZU CRANKSHAFT
FRONT OIL SEAL
INSTALLER(4JJ1)**



4107
得利卡2500 c. c.
輪軸螺帽套筒
**MITSUBISHI DELICA
WHEEL NUT REMOVER**



4118
ISUZU 曲軸後油封
安裝器(3.5T)
**ISUZU CRANKSHAFT
REAR OIL SEAL
INSTALLER(3.5 T)**



5170
ISUZU 曲軸後油封
拆卸器(3.5T)
**ISUZU CRANKSHAFT
REAR OIL SEAL
REMOVER(3.5 T)**



5171
ISUZU
前輪軸外輪承安裝器組
ISUZU FRONT AXLE BEARING INSTALLER SET



5172
ISUZU
前輪軸油封安裝器
ISUZU FRONT AXLE OIL SEAL INSTALLER



5173
ISUZU 前輪軸外管
油封安裝器
ISUZU FRONT AXLE OUTER OIL SEAL INSTALLER



5174
ISUZU 前輪軸心
滾針軸承安裝器
ISUZU FRONT AXLE NEEDLE BEARING INSTALLER



5175
ISUZU後輪軸
軸承安裝器
ISUZU REAR AXLE BEARING INSTALLER



5176
ISUZU後輪軸
外油封安裝器
ISUZU REAR AXLE OIL SEAL INSTALLER



5177
ISUZU 後輪傳動軸
外管油封安裝器
ISUZU REAR DRIVE SHAFT OIL SEAL INSTALLER



5178
ISUZU
輪速感知器安裝器
ISUZU WHEEL SPEED SENSOR INSTALLER



5179
ISUZU 輪軸傳
動軸套筒(RT50)
ISUZU ALXE SHAFT SOCKET (RT50)



5180
ISUZU 噴油嘴高壓
鋼管油封安裝器
ISUZU INJECTOR HIGH PRESSURE PIPE OIL SEAL INSTALLER



5181
ISUZU 氣門間隙
調整套筒
ISUZU VALVE GAP ADJUSTING SOCKET



5182
ISUZU
氣門導管拆裝器
ISUZU VALVE DUCTING REMOVER/INSTALLER



5186
ISUZU 離合器
導向軸承拆卸器
ISUZU CLUTCH PILOT BEARING REMOVER



5183
ISUZU 延長手柄
ISUZU EXTENSION HANDLE



5187
ISUZU 卡車機油芯
扳手(118/16PT)
ISUZU TRUCK OIL FILTER WRENCH (118/16PT)



5188
ISUZU 上三角架球
接頭拆卸器
ISUZU FRONT AXLE UPPER BALL JOINT REMOVER



5189
ISUZU 下三角架球
接頭拆卸器
ISUZU LOWER CONTROL ARM BALL JOINT REMOVER



5190
ISUZU
下搖臂軸套拆裝器
ISUZU LOWER LINK BUSHING REMOVER/INSTALLER



4147
ISUZU 前後曲軸油封
安裝器(中型車)
ISUZU CRANKSHAFT OIL SEAL REPLACING TOOL(LIGHT TRUCK)



5191
ISUZU 工字樑支架
襯套拆裝器
ISUZU SUSPENSION FRAME BUSH REMOVER/INSTALLER



5192
ISUZU 變速箱
主軸拆卸器組
ISUZU TRANSMISSION SPINDLE REMOVER SET



5193
ISUZU 變速箱
軸承安裝器
ISUZU TRANSMISSION BEARING INSTALLER



5194
ISUZU 變速箱
油封安裝器
ISUZU TRANSMISSION OIL SEAL INSTALLER



5195
ISUZU 差速器防滑
齒輪拆裝器
ISUZU DIFFERENTIAL NON-SLIP GEAR REMOVER/INSTALLER



5196
ISUZU 差速器軸承
安裝器組
ISUZU DIFFERENTIAL BEARING INSTALLER SET



5197
ISUZU 冷氣壓縮機
皮帶盤安裝器
ISUZU COMPRESSOR PULLEY INSTALLER



7778
ISUZU 後輪螺帽套筒
ISUZU REAR WHEEL NUT SOCKET



7770
ISUZU 曲軸前油封/
風扇油封安裝器
ISUZU CRANKSHAFT FRONT OIL SEAL/FAN OIL SEAL INSTALLER



4401
ISUZU 柴油濾心器
扳手組(五期)
ISUZU DIESEL FUEL FILTER WRENCH SET(EURO 5)



4402
ISUZU 柴油濾心器
扳手(四期)
ISUZU DIESEL FUEL FILTER WRENCH (EURO 4)



4403
HINO 柴油濾心器
扳手(五期)
HINO DIESEL FUEL FILTER WRENCH (EURO 5)



5294
HINO 柴油濾心器
扳手(4.5期)
HINO DIESEL FUEL FILTER WRENCH (EURO 4, 5)



5295
HINO 方向機油封套筒
HINO STEERING OIL SEAL SOCKET



5296
HINO 後輪軸套筒
(105mm)
HINO REAR WHEEL AXLE NUT SOCKET (105mm)



5582
HINO 後輪軸套筒
(120mm)
HINO REAR AXLE NUT SOCKET(120mm)



4148
HINO 曲軸後油封
安裝器(J08C)
HINO CRANKSHAFT REAR OIL SEAL INSTALLER(J08C)



5464
HINO 曲軸前油封
安裝器(J08C)
HINO CRANKSHAFT FRONT OIL SEAL INSTALLER(J08C)



4149
HINO 曲軸前油封
安裝器
HINO CRANKSHAFT FRONT OIL SEAL INSTALLER



5469
HINO #700剎車
調整扳手
HINO #700 BRAKE ADJUSTMENT WRENCH



7774
HINO 曲軸前油封
安裝器(K13C-TV)
HINO CRANKSHAFT FRONT OIL SEAL INSTALLER(K13C-TV)



5583
HINO 曲軸後油封
安裝器(K13C-TV)
HINO CRANKSHAFT REAR OIL SEAL INSTALLER(K13C-TV)



5465
HINO 曲軸前油封
安裝器(E13C)
**HINO CRANKSHAFT
FRONT OIL SEAL
INSTALLER(E13C)**



5466
HINO 曲軸後油封
安裝器(E13C)
**HINO CRANKSHAFT
REAR OIL SEAL
INSTALLER(E13C)**



5161
UD 曲軸後油封
安裝器(CK)
**UD CRANKSHAFT
REAR OIL SEAL
INSTALLATION
TOOL(CK)**



5162
UD 曲軸後油封
安裝器(CW)
**UD CRANKSHAFT
REAR OIL SEAL
INSTALLATION
TOOL(CW)**



7771
UD 曲軸後油封
安裝器(FE6)
**UD CRANKSHAFT
REAR OIL SEAL
INSTALLER(FE6)**



5476
UD 柴油濾心器
扳手(中型車)
**UD DIESEL
FUEL FILTER
WRENCH(MID-
SIZE TRUCK)**



5477
UD, VOLVO
柴油濾心器
扳手(大型車)
**UD, VOLVO DIESEL
FUEL FILTER
WRENCH(FULL
-SIZE TRUCK)**



5479
ZF 變速箱透氣孔
專用套筒(5、6速)
**ZF TRANSMISSION
VENT HOLE SOCKET
(5, 6 SPEED)**



5480
ZF 變速箱油封
安裝器(5速)
**ZF TRANSMISSION
OIL SEAL
INSTALLER
(5 SPEED)**



5481
ZF 變速箱
主軸承拆卸器(5速)
**ZF TRANSMISSION
MAIN AXLE
BEARING
REMOVER
(5 SPEED)**



5482
ZF 變速箱副軸承
拆卸器(5速)
**ZF TRANSMISSION
AUXILIARY BEARING
REMOVER (5 SPEED)**



5483
ZF 變速箱主軸支撐座
**ZF TRANSMISSION
SPINDLE SUPPORT
STAND**



5484
ZF 變速箱主軸座
拆卸器(5速)
**ZF TRANSMISSION
MAIN AXLE BASE
REMOVER(5 SPEED)**



5485
ZF 變速箱副軸承座
拆卸器(5速)
**ZF TRANSMISSION
AUXILIARY BEARING
BASE REMOVER
(5 SPEED)**



5486
ZF 變速箱固定板(5速)
**ZF TRANSMISSION
HOLDING PLATE
(5 SPEED)**



5487
ZF 變速箱輸入軸
油封安裝器(6速)
**ZF TRANSMISSION
INPUT AXLE OIL SEAL
INSTALLER
(6 SPEED)**



5488
ZF 變速箱輸出軸
油封安裝器(6速)
**ZF TRANSMISSION
OUTPUT AXLE OIL SEAL
INSTALLER(6 SPEED)**



5489
ZF 變速箱
換檔軸定位銷(6速)
**ZF TRANSMISSION
SHIFT SHAFT
ALIGNMENT
PIN(6 SPEED)**



5490
ZF 變速箱倒檔
惰輪定位銷(6速)
**ZF TRANSMISSION
REVERSE IDLER
ALIGNMENT PIN(6 SPEED)**



5491
ZF 變速箱軸承座安裝器
(6速)
**ZF TRANSMISSION
BEARING BASE
INSTALLER(6 SPEED)**



5492
ZF 變速箱齒輪安裝套管
(6速)
**ZF TRANSMISSION
GEAR INSTALLATION
CASING(6 SPEED)**



5493
ZF 變速箱軸承
拆卸器(6速)
**ZF TRANSMISSION
BEARING REMOVER
(6 SPEED)**



5494
ZF 變速箱同步齒輪
軸承固定殼(組裝工具)
**ZF TRANSMISSION
SYNCHROMESH
BEARING INSTALLER**



5495
ZF 變速箱主軸承
拆卸器(6速)
**ZF TRANSMISSION
MAIN AXLE BEARING
REMOVER(6 SPEED)**



5496
ZF 變速箱副軸承拆卸器
(6速)
**ZF TRANSMISSION
AUXILIARY BEARING-
REMOVER(6 SPEED)**



5497
ZF 變速箱軸承拆裝
延長管(6速)
**ZF TRANSMISSION
BEARING REMOVER
EXTENSION TUBE
(6 SPEED)**



5498
ZF 變速箱雙頭牙
連接器(6速)
**ZF TRANSMISSION
ADAPTER(6 SPEED)**



5499
ZF 變速箱固定板(6速)
**ZF TRANSMISSION
HOLDING PLATE
(6 SPEED)**



7784
大車變速箱培林
拆卸器
**TRUCK
TRANSMISSION
BEARING PULLER**



5154
卡車變速箱培林
拆卸器(ZF 12S)
**TRUCK
TRANSMISSION
BEARING PULLER
(ZF 12S)**



5155
ISUZU 卡車變速箱培林
拆卸配件
**THE PART OF ISUZU
TRUCK TRANSMISSION
BEARING PULLER**



5156
HINO 卡車變速箱培林
拆卸配件
**THE PART OF HINO
TRUCK TRANSMISSION
BEARING PULLER**



5157
SCANIA 卡車變速箱培林
拆卸配件
**THE PART OF SCANIA
TRUCK TRANSMISSION
BEARING PULLER**



7686
卡車變速箱培林/軸套
/齒輪拆卸器(ZF16S)
**TRUCK TRANSMISSION
BEARING/BUSHING/
GEAR REMOVAL KIT
(ZF 16S)**



4150
大車水箱壓力表
**HGV COOLING SYSTEM
PRESSURE TEST
KIT(TRUCK)**



4756
4PCS
卡車噴油嘴套筒組
**NOZZLE PRESSURE
NUT SOCKET SET**



5247
日系卡車氣門拆裝器
**JAPANESE TRUCK
VALVE REMOVER
/ INSTALLER**



5245
卡車噴油嘴拆卸器
**TRUCK INJECTOR
EXTRACTOR**



4818
柴油噴油嘴
試驗器
**DIESEL INJECTOR
TEST AND
CALIBRATING
HAND PUMP**



4068
柴油氣缸套拔卸器
**DIESEL CYLINDER
SLEEVE PULLER
SET**



4424
3PCS 管路拆卸器
**3PCS TUBE
REMOVER**



4425
管路拆卸器13 x 14
**TUBE REMOVER
13 x 14**



5594
歐系卡車剎車
卡鉗套筒(11齒)
**EUROPEAN TRUCK
BRAKE CALIPER
SOCKET (11T)**



大車離合器校正器
TRUCK CLUTCH ALIGNMENT

編號 Item	規格 Spec	規格 Spec
77851	1-1/2" O.D., 30mm pilot	UNIVERSAL
77852	1-1/2" O.D., 1" pilot	MB, MAN, VOLVO, ISUZU, IVECO(E.G. EURO CARGO 7.5T), FORD, CHEVROLET/GM.
77853	1-3/4" O.D., 30mm pilot	FORD, CHEVROLET/GM.
77854	2" O.D., 30mm pilot	VOLVO, IVECO(E.G. STRALIS), FORD, CHEVROLET/GM.
77855	1-3/4" O.D., 1" pilot	VOLVO, MB, ISUZU, IVECO(E.G. EURO CARGO 12T), FORD.



5241
插銷型後輪
螺帽拆裝器
**UNIVERSAL WHEEL
AXLE NUT REMOVER/
INSTALLER KIT**



4218
德式後輪螺帽拆裝器
(通用型)
**GERMANY-TYPE
ADJUSTABLE REAR
AXLE NUT TOOL**



4045
強力型後輪螺帽
拆裝器(可調式)
**UNIVERSAL
ADJUSTABLE
REAR AXLE NUT
TOOL KIT**



5246
萬用型日系卡車
軸拔卸器
**JAPANESE TRUCK
UNIVERSAL
AXLE EXTRACTOR**



5168
φ23 卡車軸輪拆卸配件
**φ 23 TRUCK AXLE
REMOVER PARTS**



 
5169
φ31 卡車軸輪拆卸配件
**φ 31 TRUCK AXLE
REMOVER PARTS**



5244
萬用型卡車輪軸HUB
拆卸器
**UNIVERSAL TRUCK
WHEEL HUB
REMOVER**



5167
加長萬用型卡車
輪軸HUB拆卸器
**EXTENDED
UNIVERSAL
TRUCK WHEEL
HUB REMOVER**

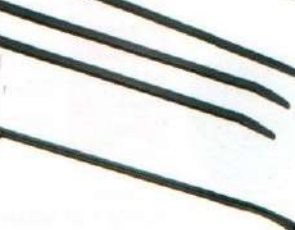

1912
剎車彈簧鉗(小型)
**BRAKE SPRING
PLIERS**



1913
剎車彈簧鉗(大型)
**BRAKE SPRING
PLIERS**



4886
大車輪胎撬棒
(3支組)
**3PCS TRUCK
TIRE LEVER SET**



5472
大車輪胎撬棒 φ22
**TRUCK TIRE
LEVER φ 22**



4887
大車輪胎衝擊器
**TRUCK TIRE
IMPACT TOOL**



4888
大車高速胎拆胎器
**TRUCK TIRE
SEPARATION
TOOL**

4355
4PCS 大車輪胎
定位桿(無牙)
**TRUCK WHEEL STUD
ALIGNMENT GUIDE
TOOL(NO THREAD)**

4220
9PCS 大車輪胎
定位桿組
**WHEEL STUD
ALIGNMENT GUIDE
TOOL**



5825
橡膠型車輪止滑墊
ANTI-SLIDE RUBBER MAT



1239
後輪剎車調整扳手
(2PCS)
BRAKE SPOONS



4877
大車剎車調整扳手
(2PCS)
BRAKE SPOONS



5596
方型大車剎車調整
扳手
**SQUARE BRAKE
SPOONS**



4268
輪軸蓋拆卸鉗
HUB CAP PLIERS



5820
剎車皮氣動
拉釘槍
**AIR BRAKE
RIVETER**



1517
油壓式大車剎車皮鉚釘機
**HYDRAULIC BRAKE
LINING RIVET MACHINE**



5166
電動大車剎車皮鉚釘機
**ELECTRICAL TRUCK
BRAKE PAD RIVET
MACHINE**



5572
大車萬向十字接頭
拆卸器(H座)
**TRUCK UNIVERSAL
CROSS JOINT
REMOVER(H TYPE)**

萬向十字頭拆卸器(爪型)
**UNIVERSAL CROSS JOINT
REMOVER(JAW)**

編號 Item	培林蓋 Bearing cups	A	B	C
5571	38-55mm	64mm	106mm	113mm
7688	32-43mm	44mm	70mm	78mm
7689	25-32mm	34mm	50mm	57mm



1037
萬向十字接頭拆卸器(大車)
**BALL JOINT ANCHOR
PIN PRESS SET**



7780
萬向十字接頭培林蓋
安裝器
**UNIVERSAL JOINT
BEARING CAP
INSTALLER**



1352
F型螺絲修整工具
**UNIVERSAL
OUTSIDE THREAD
CHASER**



5247
日系卡車氣門拆裝器
**JAPANESE TRUCK
VALVE REMOVER
/ INSTALLER**



5245
卡車噴油嘴拆卸器
**TRUCK INJECTOR
EXTRACTOR**



4818
柴油噴油嘴
試驗器
**DIESEL INJECTOR
TEST AND
CALIBRATING
HAND PUMP**



4068
柴油氣缸套拔卸器
**DIESEL CYLINDER
SLEEVE PULLER
SET**



4424
3PCS 管路拆卸器
**3PCS TUBE
REMOVER**



4425
管路拆卸器13 x 14
**TUBE REMOVER
13 x 14**



5594
歐系卡車剎車
卡鉗套筒(11齒)
**EUROPEAN TRUCK
BRAKE CALIPER
SOCKET (11T)**



大車離合器校正器
TRUCK CLUTCH ALIGNMENT

編號 Item	規格 Spec	規格 Spec
77851	1-1/2" O.D., 30mm pilot	UNIVERSAL
77852	1-1/2" O.D., 1" pilot	MB, MAN, VOLVO, ISUZU, IVECO(E.G. EURO CARGO 7.5T), FORD, CHEVROLET/GM.
77853	1-3/4" O.D., 30mm pilot	FORD, CHEVROLET/GM.
77854	2" O.D., 30mm pilot	VOLVO, IVECO(E.G. STRALIS), FORD, CHEVROLET/GM.
77855	1-3/4" O.D., 1" pilot	VOLVO, MB, ISUZU, IVECO(E.G. EURO CARGO 12T), FORD.



5241
插銷型後輪
螺帽拆裝器
**UNIVERSAL WHEEL
AXLE NUT REMOVER/
INSTALLER KIT**



4218
德式後輪螺帽拆裝器
(通用型)
**GERMANY-TYPE
ADJUSTABLE REAR
AXLE NUT TOOL**



4045
強力型後輪螺帽
拆裝器(可調式)
**UNIVERSAL
ADJUSTABLE
REAR AXLE NUT
TOOL KIT**



 
5246
萬用型日系卡車
軸拔卸器
**JAPANESE TRUCK
UNIVERSAL
AXLE EXTRACTOR**



5168
φ23 卡車軸輪拆卸配件
**φ 23 TRUCK AXLE
REMOVER PARTS**




5169
φ31 卡車軸輪拆卸配件
**φ 31 TRUCK AXLE
REMOVER PARTS**

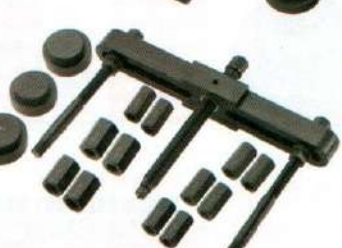

5244
萬用型卡車輪軸HUB
拆卸器
**UNIVERSAL TRUCK
WHEEL HUB
REMOVER**



 5167
加長萬用型卡車
輪軸HUB拆卸器
**EXTENDED
UNIVERSAL
TRUCK WHEEL
HUB REMOVER**

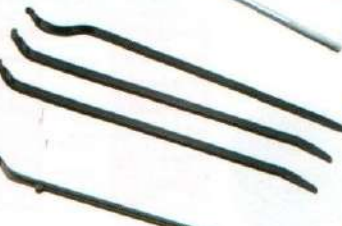

1912
剎車彈簧鉗(小型)
**BRAKE SPRING
PLIERS**



1913
剎車彈簧鉗(大型)
**BRAKE SPRING
PLIERS**



4886
大車輪胎撬棒
(3支組)
**3PCS TRUCK
TIRE LEVER SET**



5472
大車輪胎撬棒 φ22
**TRUCK TIRE
LEVER φ 22**



4887
大車輪胎衝擊器
**TRUCK TIRE
IMPACT TOOL**



4888
大車高速胎拆胎器
**TRUCK TIRE
SEPARATION
TOOL**

4355
4PCS 大車輪胎
定位桿(無牙)
**TRUCK WHEEL STUD
ALIGNMENT GUIDE
TOOL(NO THREAD)**

4220
9PCS 大車輪胎
定位桿組
**WHEEL STUD
ALIGNMENT GUIDE
TOOL**



5825
橡膠型車輪止滑墊
ANTI-SLIDE RUBBER MAT



1239
後輪剎車調整扳手
(2PCS)
BRAKE SPOONS



4877
大車剎車調整扳手
(2PCS)
BRAKE SPOONS



5596
方型大車剎車調整
扳手
**SQUARE BRAKE
SPOONS**



4268
輪軸蓋拆卸鉗
HUB CAP PLIERS



5820
剎車皮氣動
拉釘槍
**AIR BRAKE
RIVETER**



1517
油壓式大車剎車皮鉚釘機
**HYDRAULIC BRAKE
LINING RIVET MACHINE**



5166
電動大車剎車皮鉚釘機
**ELECTRICAL TRUCK
BRAKE PAD RIVET
MACHINE**



5572
大車萬向十字接頭
拆卸器(H座)
**TRUCK UNIVERSAL
CROSS JOINT
REMOVER(H TYPE)**



萬向十字頭拆卸器(爪型)
**UNIVERSAL CROSS JOINT
REMOVER(JAW)**

編號 Item	培林蓋 Bearing caps	A	B	C
5571	38-55mm	64mm	106mm	113mm
7688	32-43mm	44mm	70mm	78mm
7689	25-32mm	34mm	50mm	57mm



1037
萬向十字接頭拆卸器(大車)
**BALL JOINT ANCHOR
PIN PRESS SET**



7780
萬向十字接頭培林蓋
安裝器
**UNIVERSAL JOINT
BEARING CAP
INSTALLER**



1352
F型螺絲修整工具
**UNIVERSAL
OUTSIDE THREAD
CHASER**



5573
大車調整型培林
安裝器
**TRUCK
ADJUSTABLE
BEARING
INSTALLER**



5574
大車斜型培林油封
安裝器
**TRUCK BEARING
RACE & OIL SEAL
INSTALLER**



5575
大車HUB油封
拆卸器
**TRUCK HUB OIL
SEAL REMOVER**



7682
5PCS 大車油封
導入器
**5PCS TRUCK
CUP ROCKET
SET**



5576
大車制車彈簧
拆裝器
**TRUCK BRAKE
SPRING REMOVER/
INSTALLER**



5577
大車制車
調整扳手
**TRUCK BRAKE
ADJUSTER**



5578
大車氣壓
制車蓋套筒
**TRUCK AIR BRAKE
COVER SOCKET**



5579
大車氣壓制車調整
扳手組
**TRUCK AIR BRAKE
ADJUSTING
WRENCH SET**



5462
大車ABS制車
感應器座絞刀
**TRUCK ABS BRAKE
SENSOR BASE
REAMER**



5595
大車制車卡鉗
打擊扳手組
**TRUCK BRAKE
CALIPER IMPACT
WRENCH SET**



4115
油壓式卡車
彈簧鉗拆裝組
**HYDRAULIC
TRUCK SPLIT
PIN REMOVER/
INSTALLER**



5463
大車大王銷拆裝組
**KING PIN
REMOVAL/
INSTALLATION
TOOL SET**

3/4" 卡車輪軸套筒(6PT)
3/4" TRUCK AXLE NUT SOCKET (6PT)

編號 Item	尺寸 Size	編號 Item	尺寸 Size	編號 Item	尺寸 Size	編號 Item	尺寸 Size
6470070	70mm	6470105	105mm	6470140	140mm	6470175	175mm
6470075	75mm	6470110	110mm	6470145	145mm	6470180	180mm
5249	80mm	6470115	115mm	6470150	150mm	6470185	185mm
6470085	85mm	6470120	120mm	6470155	155mm	6470190	190mm
6470090	90mm	6470125	125mm	6470160	160mm	6470195	195mm
6470095	95mm	6470130	130mm	6470165	165mm	6470200	200mm
6470100	100mm	6470135	135mm	6470170	170mm		

3/4" 卡車輪軸套筒(8PT)
3/4" TRUCK AXLE NUT SOCKET (8PT)

編號 Item	尺寸 Size	編號 Item	尺寸 Size	編號 Item	尺寸 Size	編號 Item	尺寸 Size
6481070	70mm	5296	105mm	6481140	140mm	6481175	175mm
6481075	75mm	6481110	110mm	6481145	145mm	6481180	180mm
6481080	80mm	6481115	115mm	6481150	150mm	6481185	185mm
6481085	85mm	6481120	120mm	6481155	155mm	6481190	190mm
6481090	90mm	6481125	125mm	6481160	160mm	6481195	195mm
6481095	95mm	6481130	130mm	6481165	165mm	6481200	200mm
6481100	100mm	6481135	135mm	6481170	170mm		

1" 卡車輪軸套筒(6PT)
1" TRUCK AXLE NUT SOCKET (6PT)

編號 Item	尺寸 Size	編號 Item	尺寸 Size	編號 Item	尺寸 Size	編號 Item	尺寸 Size
8468085	85mm	8468115	115mm	8468145	145mm	8468175	175mm
8468090	90mm	8468120	120mm	8468150	150mm	8468180	180mm
5152	95mm	8468125	125mm	8468155	155mm	8468185	185mm
8468100	100mm	8468130	130mm	8468160	160mm	8468190	190mm
5151	105mm	8468135	135mm	8468165	165mm	8468195	195mm
8468110	110mm	8468140	140mm	8468170	170mm	8468200	200mm

1" 卡車輪軸套筒(8PT)
1" TRUCK AXLE NUT SOCKET (8PT)

編號 Item	尺寸 Size	編號 Item	尺寸 Size	編號 Item	尺寸 Size	編號 Item	尺寸 Size
8481070	70mm	8481105	105mm	8481140	140mm	8481175	175mm
8481075	75mm	8481110	110mm	8481145	145mm	8481180	180mm
1560	80mm	4717	115mm	8481150	150mm	8481185	185mm
8481085	85mm	1857	120mm	8481155	155mm	8481190	190mm
8481090	90mm	8481125	125mm	8481160	160mm	8481195	195mm
4716	95mm	8481130	130mm	8481165	165mm	8481200	200mm
1561	100mm	8481135	135mm	8481170	170mm		

大車輪胎扳手
TRUCK TIRE WRENCH

編號 Item	規格 Size	長度 Length
5121	Extension bar $\phi 19$	630mm
5122	24 x 27	400mm
5123	30 x 32	400mm
5124	32 x 33	400mm

大車雙用輪胎扳手
TRUCK TWO WAY TIRE WRENCH

編號 Item	規格 Size	長度 Length
5473	20 mm	38 mm 400 mm
5474	21 mm	41 mm 400 mm
5475	Extension bar 25.4mm	600 mm



7779
1" 鍛造強力型倍力扳手
**1" FORGED HEAVY
DUTY TORQUE
MULTIPLIER**

J606H
3/4" 6PCS
氣動六角凸套筒組
**3/4" 6PCS IMPACT
HEX SOCKET SET**

J606T
3/4" 6PCS 氣動
星型, 12角凸套筒
**3/4" 6PCS IMPACT
STAR & SPLINE
SOCKET SET**

J604LT
3/4" 4PCS 氣動
星型凸套筒組
**3/4" 4PCS IMPACT
STAR DEEP
SOCKET SET**

J606E
3/4" 6PCS 氣動
星型, 12角凸套筒組
**3/4" 6PCS IMPACT
STAR-E & 12PT
SOCKET SET**



J616C
3/4" 16PCS 綜合型
氣動凸套筒組
**3/4" 16PCS
IMPACT INSERT
BIT SOCKET SET**



5342
1" 倍力扳手
1" TORQUE MULTIPLIER



5343
1" 倍力扳手組(附套筒)
**1" TORQUE MULTIPLIER
SET(WITH SOCKETS)**



4106
DAF 方向機連桿
固定座套筒
**DAF STEERING LINKAGE
FIXING BASE SOCKET**



5297
DAF 曲軸校正器
(3期環保)
**DAF ENGINE CRANKSHAFT
ALIGNMENT TOOL
(EURO 3)**



5298
DAF 曲軸校正器
(4/5期環保)
**DAF ENGINE CRANKSHAFT
ALIGNMENT TOOL
(EURO 4/5)**



5461
DAF XLR 傳動軸中間軸承
固定銷(4期)
**DAF XLR PROPELLER
SHAFT CENTER BEARING
NUT SOCKET(EURO 4)**



5599
DAF 後輪軸套筒(LF45)
**DAF REAR WHEEL
NUT SOCKET(LF45)**



5459
DAF 曲軸前油封
安裝器(CF)
**DAF CRANKSHAFT
FRONT OIL SEAL
INSTALLER(CF)**



5584
DAF 曲軸前油封
安裝器(LF65)
**DAF CRANKSHAFT
FRONT OIL SEAL
INSTALLER(LF65)**



7789
DAF 曲軸後油封
安裝器(CF55)
**DAF CRANKSHAFT
REAR OIL SEAL
INSTALLER(CF55)**



7782
DAF 活塞導入器
(CF85)
**DAF PISTON GUIDE
TOOL(CF85)**



7790
DAF 差速器主軸/
大盤培林拆裝器
**DAF DIFFERENTIAL
CARRIER GEAR
REMOVER/
INSTALLER**



7788
DAF 氣門彈簧
拆裝器(CF85)
**DAF VALVE
PRESSURE SPRING
COMPRESSOR
(CF85)**



5250
IVECO 輪軸套筒
(110mm)
**IVECO AXLE NUT
SOCKET(110mm)**



5598
IVECO 輪軸套筒
(105mm)
**IVECO WHEEL NUT
SOCKET(105mm)**



5251
IVECO 輪軸套筒(98mm)
**IVECO AXLE NUT
SOCKET(98mm)**



5597
IVECO 輪軸套筒(85mm)
**IVECO WHEEL NUT
SOCKET(85mm)**



5470
IVECO 輪軸套筒(90mm)
**IVECO DRIVE AXLE
SOCKET(90mm)**



5458
IVECO 飛輪轉動器
**IVECO FLYWHEEL
ROTATING TOOL**



5592
IVECO 飛輪轉動器
**IVECO FLYWHEEL
ROTATING TOOL**



4830
SCANIA 水箱快速接頭
**SCANIA RADIATOR
QUICK ADAPTER**



1855
SCANIA 前輪避震器彈簧墊片套筒
**SCANIA FRONT WHEEL
COMPRESSOR
SPACER SOCKET**



1254
SCANIA 後輪避震器
彈簧墊片套筒
**SCANIA BACK WHEEL
COMPRESSOR SPACER
SOCKET**



4715
SCANIA 後輪避震器
彈簧墊片套筒
**SCANIA BACK WHEEL
COMPRESSOR
SPACER SOCKET**



1560
SCANIA 前輪軸
套筒(80mm)
**SCANIA FRONT
WHEEL NUT
SOCKET(80mm)**



1561
SCANIA 後輪軸
套筒(100mm)
**SCANIA REAR
WHEEL NUT
SOCKET(100mm)**



4716
SCANIA 拖車頭
前輪軸套筒(95mm)
**SCANIA TRUCK
TRACTOR FRONT
WHEEL SOCKET(95mm)**



5286
SCANIA 輪軸套筒(103mm)
**SCANIA WHEEL NUT
SOCKET(103mm)**



5478
SCANIA 大王
銷拆卸器(10軸)
**SCANIA KING
PIN REMOVER
(10 WHEELS)**



4139
SCANIA 電磁閥
噴油嘴蓋套筒(340)
**SCANIA
ELECTROMAGNETIC
INJECTOR CAP
SOCKET(340)**



1207
SCANIA 變速箱
專用套筒(64mm)
**SCANIA TRANSMISSION
SOCKET**



4191
SCANIA 變速箱螺帽
拆裝套筒(遊覽車8速)
**SCANIA TRANSMISSION
NUT SOCKET
(8-SPEED BUS)**



4192
SCANIA 變速箱離合器
前主軸螺帽套筒
**SCANIA TRANSMISSION
CLUTCH FRONT MAIN
AXLE NUT SOCKET**



4193
SCANIA 變速箱離合器
前主軸螺帽套筒
**SCANIA TRANSMISSION
CLUTCH FRONT MAIN
SHAFT SOCKET**



5285
SCANIA 卡車凸輪軸
轉動器
**SCANIA CRANKSHAFT
ROTATOR**



5283
SCANIA 曲軸後油封
安裝器
**SCANIA CRANKSHAFT
REAR OIL SEAL
INSTALLER**



5284
SCANIA 變速箱
後油封安裝器
**SCANIA
TRANSMISSION REAR
OIL SEAL INSTALLER**



7775
SCANIA 曲軸後油封
安裝器(P.R.)
**SCANIA CRANKSHAFT
REAR OIL SEAL
INSTALLER(P.R.)**



7783
SCANIA 曲軸前油封
安裝器(114)
**SCANIA CRANKSHAFT
FRONT OIL SEAL
INSTALLER(114)**



7769
SCANIA 曲軸前油封
安裝器(P.R.)
**SCANIA CRANKSHAFT
FRONT OIL SEAL
INSTALLER(P.R.)**



7787
SCANIA 活塞導入器
(112,113,114)
**SCANIA PISTON
INSTALLER
(112,113,114)**



7685
SCANIA 卡車
氣門凡爾鉗
**SCANIA TRUCK
VALVE SPRING
COMPRESSOR**



7786
SCANIA 噴油嘴水套
拆裝器(113,114)
**SCANIA INJECTOR
WATER JACKET
REMOVER/INSTALLER
(113,114)**

5299
SAF 輪軸套筒
(85mm)
**SAF AXLE NUT
SOCKET(85mm)**

5287
SAF 輪軸套筒
(140mm)
**SAF AXLE NUT
SOCKET(140mm)**

5277
HALDEX 剎車連桿
調節器拆卸工具
**HALDEX BRAKE LINKAGE
ADJUSTER EXTRACTOR**

5276
BPW 剎車連桿調節器
拆卸工具
**BPW BRAKE
LINKAGE ADJUSTER
EXTRACTOR**

7680
ROR 板車輪軸套筒
(83mm)
**ROR TRAILER WHEEL
NUT SOCKET(83mm)**

7681
ROR 板車輪軸蓋套筒
(120mm)
**ROR TRAILER WHEEL
COVER SOCKET
(120mm)**

5275
BPW 後輪軸套筒
6.5~9Ton(橢圓)
**BPW REAR WHEEL
COVER SOCKET**

**BPW 輪軸拔卸器
BPW AXLE EXTRACTOR**

編號 Item	牙距 Thread	外徑 Outer size	高度 Height	適用 Applicable
5278	M135x2.0	150mm	78mm	BPW ECO 10~12 tons old model
5279	M136x2.5	150mm	78mm	BPW ECO PLUS 8~12 tons new model

**BPW 輪軸拔卸器
BPW AXLE EXTRACTOR**

編號 Item	牙距 Thread	內徑 Inner size	高度 Height	適用 Applicable
5280	M155x3.0	98mm	98.5mm	BPW 16 tons truck
5281	M125x2.0	93.1mm	99.4mm	BPW 12 tons trailer

1856
BPW 後輪軸蓋
套筒12T(橢圓)
**BPW TRUCK
WHEEL
SOCKET(12T)**

1859
BPW 後輪軸蓋
套筒12T(8角)
**BPW TRUCK
WHEEL
SOCKET(12T)**

1857
BPW 後輪軸蓋
套筒16T(8角)
**BPW TRUCK
WHEEL
SOCKET(16T)**

5282
BPW 後輪軸培林
套筒(6.5~9T)
**BPW ROLLER
BEARING AXLE
NUT SOCKET
(6.5~9 TONS)**

4698
BPW 後輪軸培林
套筒(12T)
**BPW ROLLER
BEARING AXLE NUT
SOCKET(12T)**

7777
BPW 輪軸培林拆裝器
**BPW WHEEL HUB
BEARING TOOL SET**

5586
VOLVO
水箱快速接頭
**VOLVO RADIATOR
QUICK COUPLER**

5580
VOLVO 舉升液壓缸
拆裝器(FM12)
**VOLVO HYDRAULIC
LIFT CYLINDER
REMOVER/INSTALLER
SET(FM12)**

5467
VOLVO 噴油嘴鋼套
拆裝器(FM12)一般車
**VOLVO INJECTOR
SLEEVE REMOVER/
INSTALLER(FM12)**

5468
VOLVO 噴油嘴鋼套
拆裝器(FM12)電腦控制
**VOLVO INJECTOR
SLEEVE REMOVER/
INSTALLER
(FM12)-CGI**

5587
VOLVO 噴油嘴拔卸器
(FM/FH)
**VOLVO INJECTOR
NOZZLE PULLER
(FM/FH)**

5591
VOLVO 卡車時規蓋安裝器
**VOLVO TRUCK TIMING
GEAR COVER INSTALLER**

4717
VOLVO 卡車輪軸蓋
套筒(115mm)
**VOLVO WHEEL
SHAFTCOVER
SOCKET(115mm)**

5151
VOLVO 卡車輪軸套筒
(105mm)
**VOLVO TRUCK AXLE
NUT SOCKET(105mm)**

5152
VOLVO 卡車輪軸套筒
(95mm)
**VOLVO TRUCK AXLE
NUT SOCKET(95mm)**

5249
VOLVO 大王銷上蓋套筒
(80mm)
**VOLVO KING PIN UPPER
COVER SOCKET(80mm)**

5292
VOLVO 前避震器彈簧
墊片套筒
**VOLVO FRONT SPRING
WASHER SOCKET**

5288
VOLVO 避震器彈簧
墊片套筒
**VOLVO REAR SPRING
WASHER SOCKET**

5293
VOLVO 卡車風扇培林
底座套筒(53.8mm)
**VOLVO TRUCK FAN
BEARING BASE
SOCKET(53.8mm)**

5158
VOLVO 卡車機油芯
扳手(107/15PT)
**VOLVO TRUCK OIL
FILTER WRENCH
(107/15PT)**

5248
卡鉗調整器套筒(5齒)
**CALLIPER ADJUSTER
SOCKET**

5291
VOLVO 卡車曲軸轉動器
**VOLVO ENGINE
CRANKSHAFT
ALIGNMENT TOOL**

5160
VOLVO 曲軸飛輪轉動
工具(MP8, MP10)
**VOLVO FLYWHEEL
TURNING TOOL(MP8,
MP10)**

5588
VOLVO 差速器主軸培林
安裝器(FM/FH)
**VOLVO DIFFERENTIAL
SPINDLE BEARING
INSTALLER(FM/FH)**

5590
VOLVO 曲軸前油封
安裝器(FM)
**VOLVO CRANKSHAFT
FRONT OIL SEAL
INSTALLER(FM)**

5460
VOLVO 曲軸後油封
安裝器(FM12)
**VOLVO CRANKSHAFT
REAR OIL SEAL
INSTALLER(FM12)**

5589
VOLVO 卡車ABS齒環
安裝器(FM)
**VOLVO TRUCK ABS
SENSOR RING
FITTING TOOL(FM)**

7791
VOLVO 輪軸培林
拆裝套筒(FM12)
**VOLVO HUB AXLE
BEARING INSTALLER
AND REMOVER SET
(FM12)**

7792
VOLVO 輪軸油封
安裝器(FM12)
**VOLVO HUB AXLE OIL
SEAL INSTALLER
(FM12)**

7793
VOLVO 惰輪皮帶調整
扳手(FM12)
**VOLVO SERPENTINE
BELT ADJUSTING
TOOL(FM12)**

7794
VOLVO 差速器主軸/
大盤培林拆裝組(FM12)
**VOLVO DIFFERENTIAL
CARRIER GEAR
REMOVER/INSTALLER
(FM12)**



7795
VOLVO 機油冷卻器
固定安裝器(FM)
**VOLVO OIL COOLER
INSTALLER(FM)**



7796
VOLVO 正時齒輪套筒
(FM)
**VOLVO TIMING GEAR
SOCKET(FM)**



5261
BENZ, MAN 差速器
後螺母套筒(113mm)
**BENZ, MAN
DIFFERENTIAL
REAR NUT SOCKET
(113mm)**



5240
卡車碟剎工具組
(KNORR-BREMSE)
**KNORR-BREMSE
DISC BRAKE TOOL**



後軸螺牙保護管
REAR AXLE EXTENSION TUBE

編號 Item	牙距 Thread	內徑 Inner size	外徑 Outer size	長度 Length	適用 Applicable
5273	M100x1.5	96mm	105mm	360mm	MAN TGA HY1350
5264	M75x1.5(L)	60mm	78mm	180mm	BENZ Atego/Vario
5265	M75 x 1.5(R)	60mm	80mm	180mm	MAN L series



5274
MAN 機油芯扳手
**MAN OIL FILTER
WRENCH**



5289
VOLVO 卡車車頭避震器
上座螺帽拆卸器
**VOLVO HGV SPRING
BASE NUT EXTRACTOR/
INSTALLER**



7684
BENZ
卡車後輪雙軸螺母套筒(2636)
**BENZ TRUCK REAR WHEEL
AXLE NUT SOCKET(2636)**



5260
BENZ, MAN 帶動軸套筒
(101.5mm)
**BENZ, MAN DRIVE AXLE
NUT SOCKET(101.5mm)**



5267
MAN TGA
帶動軸螺帽套筒(117mm)
**MAN TGA DRIVE AXLE
NUT SOCKET(117mm)**



5268
MAN TGA
前輪軸套筒(93mm)
**MAN TGA FRONT AXLE
NUT SOCKET(93mm)**



5164
BENZ
後輪軸套筒(101.5mm)
**BENZ REAR AXLE NUT
SOCKET(101.5mm)**



5585
RENAULT 飛輪轉動器
(MAGNUM)
**RENAULT FLYWHEEL
TURNING TOOL
(MAGNUM)**



5271
MAN 卡車變速箱套筒
(53.5mm)
**MAN TRANSMISSION
SOCKET(53.5mm)**



5581
BENZ 輪軸螺絲
套筒(32 EPL)
**BENZ ACTROS
AXLE BOLT
SOCKET(32 EPL)**



5252
BENZ 輪軸套筒
(95mm/6PT)
**BENZ AXLE NUT
SOCKET
(95mm/6PT)**



BENZ, MAN 卡車輪軸套筒
BENZ, MAN CLAMP NUT SOCKET

編號 Item	規格 Spec	高度 Height	適用 Applicable
5257	71x56mm	53mm	DAF, KASSBOHRER/ SETRA BENZ & MAN Trucks(VL3.4,VD4,VL4) BENZ buses(V03.4)
5258	76x60mm	53mm	DAF, KASSBOHRER/ SETRA BENZ & MAN 9tons(VL5,D-9) BENZ Actros, Faust 9tons



7781
BENZ 輪軸套筒(95mm/12PT)
**BENZ AXLE NUT SOCKET
(95mm/12PT)**



5253
BENZ 後輪軸套筒
(116mm)
**BENZ REAR AXLE NUT
SOCKET(116mm)**



5255
BENZ 後輪軸套筒
(123.5mm)
**BENZ REAR AXLE NUT
SOCKET(123.5mm)**



5254
BENZ, MAN
後輪軸套筒(87mm)
**BENZ, MAN REAR
AXLE NUT SOCKET
WITH TUBE(87mm)**



5259
BENZ, MAN 後輪軸套筒
(101mm)
**BENZ, MAN REAR AXLE
NUT SOCKET(101mm)**



5163
BENZ 後輪軸套筒(91.5mm)
**BENZ REAR AXLE NUT
SOCKET(91.5mm)**



5256
BENZ 差速器套筒
(72mm)
**BENZ DIFFERENTIAL
NUT SOCKET(72mm)**



7776
BENZ 拖車頭差速器
主軸套筒(2544)
**BENZ TRUCK TRACTOR
DIFFERENTIAL MAIN
AXLE SOCKET(2544)**

5266
MAN 飛輪旋轉器
**MAN FLYWHEEL
ROTATING TOOL**

5239
MAN 卡車方向機油封套筒
**MAN STEERING OIL
SEAL SOCKET**

5242
卡車位置感應器套筒
(27mm)
**TRUCK POSITION
SENSOR SOCKET(27mm)**

5262
BENZ, MAN
曲軸校正器(2齒)
**BENZ, MAN CRANKSHAFT
ALIGNMENT TOOL
(2 GEARS)**

5263
BENZ, MAN
曲軸校正器(3齒)
**BENZ, MAN CRANKSHAFT
ALIGNMENT TOOL
(3 GEARS)**

5165
BENZ 後輪軸油封
安裝器
**BENZ REAR AXLE OIL
SEAL INSTALLER**



5237
MAN 輪軸培林拆卸器
**MAN TRUCK AXLE B
EARING EXTRACTOR**



5238
MAN 拖車頭輪軸培林
拆卸器
**MAN TRACTOR AXLE
BEARING EXTRACTOR**



5269
MAN 前輪HUB拆卸器
**MAN FRONT WHEEL
HUB EXTRACTOR**



5270
MAN 前輪HUB安裝器
**MAN FRONT WHEEL
HUB INSTALLER**



5272
MAN 前輪HUB拆卸器
(166mm)
**MAN FRONT WHEEL
HUB REMOVER
(166mm)**